



Ph: 1300 MR SCAFFOLD

(Ph:1300 677 223)

www.mrscaffold.com.au

SAFETY GUIDE

Applies to:

FOLDSCAF **EASYSCAF** **SUPASCAF** **LOCKSCAF** **KWIKSCAF**

NOTE: When there is a possibility of a fall of more than 4m, a ticketed scaffolder must install/dismantle the scaffold.

- Only a competent scaffold ticket holder is permitted where a person or object could fall more than 4.0 m to erect, alter or dismantle a scaffold.
- When scaffold is erected in public places, check with authorities if permit is required. Isolate the area whenever necessary
- Prepare the work area for safe erection, use, alteration, dismantling of scaffolding and identify all possible hazards
- Scaffolding must not be located within 4.0 m of any conductors of an overhead electrical power line
- Ensure to locate scaffold on firm supporting surface and level scaffold by adjusting leg nut and lock all castors before each use
- Ensure enough rigidity and isolate the working area before entering scaffold
- Never overload maximum capacity indicated for the scaffold
- Never sit, climb or stand on guard rails, braces or toe-boards
- Mobile scaffold should not be used when slope is more than 5 degrees
- Never move the scaffold while a person is on any part of the tower
- Mobile scaffold shall not be moved unless unoccupied and there is no possibility for falling objects
- Do not abuse the scaffold and always follow manufacturer guidelines, your safety depends on it

© Copyright 2006 - Mr Scaffold Pty Ltd

* To be used as a guide only. Mr Scaffold accepts no liability for accuracy of this information.